




***INVERTER SPLIT-TYPE ROOM AIR CONDITIONER***

---

# Owner's Manual

## Kids Star Series

All Model Numbers

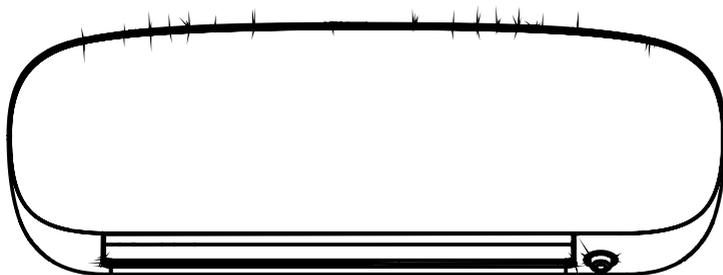

### **IMPORTANT NOTE:**

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.




# Table of Contents

## Owner's Manual

**0** Safety Precautions .....04


**1** Unit Specifications and Features .....06

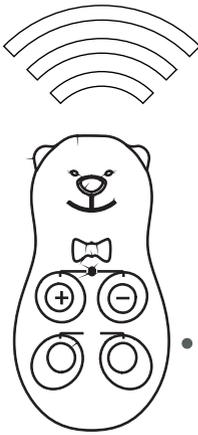


**2** Your Remote Control .....08

**3** How to Use Basic Functions.....10


- a. AUTO Function ..... 10
- b. COOL Function ..... 10
- c. HEAT Function..... 10
- d. Setting temperature ..... 11
- e. Setting Fan Speed ..... 11
- f. Setting Angle of Air Flow ..... 11
- g. LOCK function ..... 12

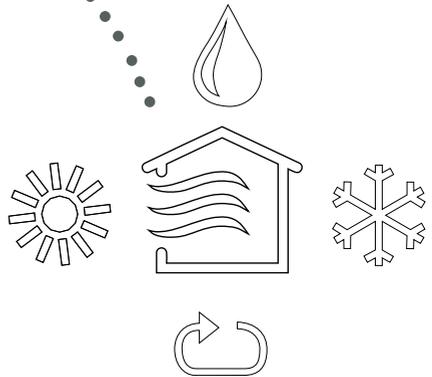

|          |  |    |
|----------|--|----|
| <b>4</b> | <b>How to Use Advanced Functions</b> .....     | 13 |
|          | a. Electrical Heating Function .....           | 13 |
|          | b. Temperature Display Function .....          | 13 |
|          | c. Light Sensitive Function .....              | 13 |
|          | d. ECO Function .....                          | 13 |
|          | e. Intelligent Eye Function .....              | 14 |
| <b>5</b> | <b>Manual Operation (Without Remote)</b> ..... | 15 |
| <b>6</b> | <b>Care and Maintenance</b> .....              | 16 |

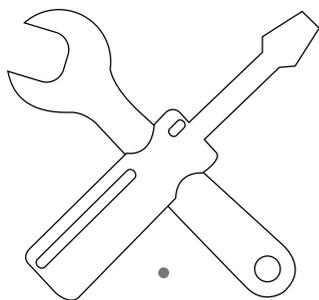

|          |                              |    |
|----------|------------------------------|----|
| <b>7</b> | <b>Troubleshooting</b> ..... | 18 |
|----------|------------------------------|----|

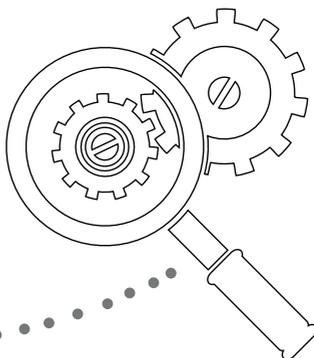

|          |   |    |
|----------|---|----|
| <b>8</b> | <b>European Disposal Guidelines</b> ..... | 22 |
|----------|---|----|

# Safety Precautions

## Read Safety Precautions Before Installation

Incorrect installation due to ignoring instructions can cause serious damage or injury. The seriousness of potential damage or injuries is classified as either a **WARNING** or **CAUTION**.



**WARNING**

This symbol indicates that ignoring instructions may cause death or serious injury.



**CAUTION**

This symbol indicates that ignoring instructions may cause moderate injury to your person, or damage to your appliance or other property.



### **WARNING**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### **INSTALLATION WARNINGS**

- Ask an authorized dealer to install this air conditioner. Inappropriate installation may cause water leakage, electric shock, or fire.
- All repairs, maintenance and relocation of this unit must be performed by an authorized service technician. Inappropriate repairs can lead to serious injury or product failure.

### **WARNINGS FOR PRODUCT USE**

- If an abnormal situation arises (like a burning smell), immediately turn off the unit and pull the power plug. Call your dealer for instructions to avoid electric shock, fire or injury.
- **Do not** insert fingers, rods or other objects into the air inlet or outlet. This may cause injury, since the fan may be rotating at high speeds.
- **Do not** use flammable sprays such as hair spray, lacquer or paint near the unit. This may cause fire or combustion.
- **Do not** operate the air conditioner in places near or around combustible gases. Emitted gas may collect around the unit and cause explosion.
- **Do not** operate the air conditioner in a wet room (e.g., bathroom or laundry room). This can cause electrical shock and cause the product to deteriorate.
- **Do not** expose your body directly to cool air for a prolonged period of time.

## ELECTRICAL WARNINGS

- Only use the specified power cord. If the power cord is damaged, it must be replaced by the manufacturer or certified service agent.
- Keep power plug clean. Remove any dust or grime that accumulates on or around the plug. Dirty plugs can cause fire or electric shock.
- **Do not** pull power cord to unplug unit. Hold the plug firmly and pull it from the outlet. Pulling directly on the cord can damage it, which can lead to fire or electric shock.
- **Do not** use an extension cord, manually extend the power cord, or connect other appliances to the same outlet as the air conditioner. Poor electrical connections, poor insulation, and insufficient voltage can cause fire.

## CLEANING AND MAINTENANCE WARNINGS

- Turn off the device and pull the plug before cleaning. Failure to do so can cause electrical shock.
- **Do not** clean the air conditioner with excessive amounts of water.
- **Do not** clean the air conditioner with combustible cleaning agents. Combustible cleaning agents can cause fire or deformation.

## CAUTION


- If the air conditioner is used together with burners or other heating devices, thoroughly ventilate the room to avoid oxygen deficiency.
- Turn off the air conditioner and unplug the unit if you are not going to use it for a long time.
- Turn off and unplug the unit during storms.
- Make sure that water condensation can drain unhindered from the unit.
- **Do not** operate the air conditioner with wet hands. This may cause electric shock.
- **Do not** use device for any other purpose than its intended use.
- **Do not** climb onto or place objects on top of the outdoor unit.
- **Do not** allow the air conditioner to operate for long periods of time with doors or windows open, or if the humidity is very high.

# Unit Specifications and Features

1

## Unit Parts

### Indoor unit

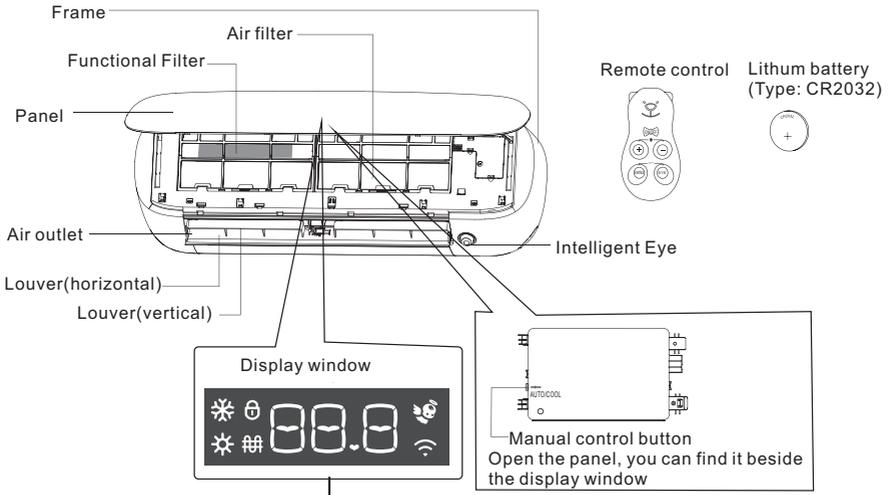

**Fig.1**

- ❄️ Cooling operation
  - 🔥 Heating operation
  - 🔌 Electrical Heating operation
  - 🔒 Lock function is turned on
  - 00.0 Displays selected temperature & self-diagnostic codes
  - 👁️ when intelligent eye function is turned on
  - 📶 when WIFI function is turned on
- In Fan mode, the unit will display the room temperature.
- In other modes, the unit will display your temperature setting.

### Display Code Meanings

## Production Specifications

- Product Number
- Indoor Unit Dimensions
- Outdoor Unit Dimensions
- Heat Pump / Electrical Heat
- Remote Control

## Main Functions

Your new air conditioner can:

- Cool you down
- Warm you up (for heat pump units)
- Work as a fan

## Achieving Optimal Performance

Optimal performance for the COOL, HEAT, and DRY modes can be achieved in the following temperature ranges. When your air conditioner is used outside of these ranges, certain safety protection features will activate and cause the unit to perform less than optimally.

|                     | COOL mode   | HEAT mode                    | DRY mode                     |
|---------------------|---|------------------------------|------------------------------|
| Room Temperature    | 17°C - 32°C<br>(62°F - 90°F)  | 0°C - 30°C<br>(32°F - 86°F)  | 10°C - 32°C<br>(50°F - 90°F) |
| Outdoor Temperature | 0°C - 50°C<br>(32°F - 122°F)  | -15°C - 30°C<br>(5°F - 86°F) | 0°C - 50°C<br>(32°F - 122°F) |
|                     | -15°C - 50°C<br>(5°F - 122°F)<br>(For models with low temp. cooling systems.) |                              |                              |

### FOR UNITS WITH AUXILIARY ELECTRIC HEATER

When outside temperature is below 0°C(32°F), we strongly recommend keeping the unit plugged in at all times to ensure smooth ongoing performance.

### To further optimize the performance of your unit, do the following:

- Keep doors and windows closed
- Do not block air inlets or outlets
- Regularly inspect and clean air filters

### NOTE ON ILLUSTRATIONS

Illustrations in this manual are for explanatory purposes. The actual shape of your indoor unit may be slightly different. The actual shape shall prevail.

# Your Remote Control

# 2

**WARNING: The Remote control is not a toy. Not suitable for children under 36 months. Small part. Choking hazard.**

Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the **How to Use Basic Functions** section of this manual.

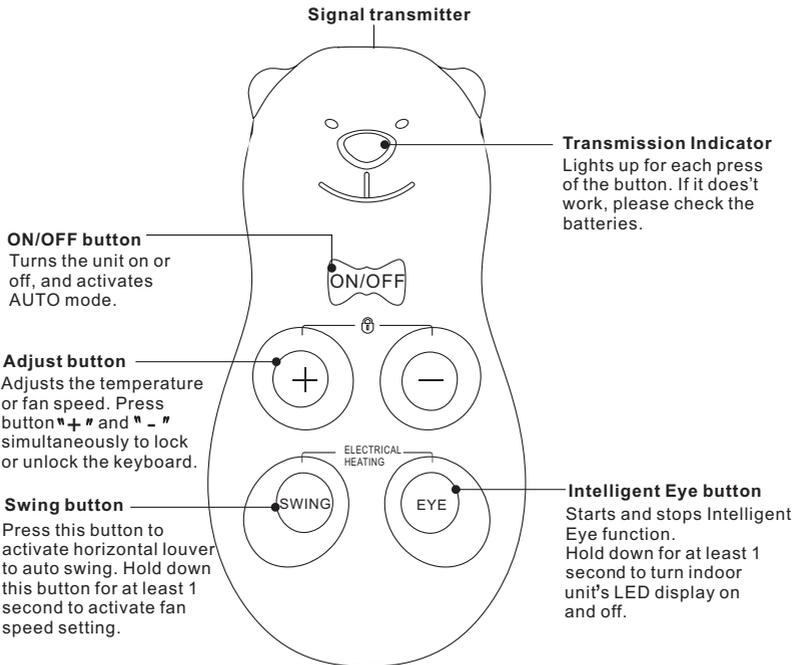


Fig.2



Press button **+** and **SWING** simultaneously to activate HEAT mode.



Press button **Swing** and **EYE** simultaneously to turn electrical heating function on and off



Press button **-** and **EYE** simultaneously to activate COOL mode.



Press button **+** and **EYE** simultaneously to activate AP mode.

### NOT SURE WHAT A FUNCTION DOES?

Refer to the How to Use Basic Functions and **How to Use Advanced Functions** sections of this manual for a detailed description of how to use your air conditioner.

### SPECIAL NOTE

- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will have no effect.

### Inserting and Replacing Batteries

Your air conditioning unit comes with one button Battery. Put the battery in the remote control before use.

1. Use a sharp tool like a flat screwdriver to pry open the battery compartment as shown in Fig.4.
2. Install the battery, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery compartment back into place.

### ! BATTERY NOTES

For optimum product performance:

- Do not mix old and new batteries, or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.





### BATTERY DISPOSAL

Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

### TIPS FOR USING REMOTE CONTROL

- The remote control must be used within 8 meters of the unit.
- The unit will beep when remote signal is received.
- Curtains, other materials and direct sunlight can interfere with the infrared signal receiver.
- Remove batteries if the remote will not be used more than 2 months.

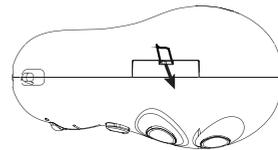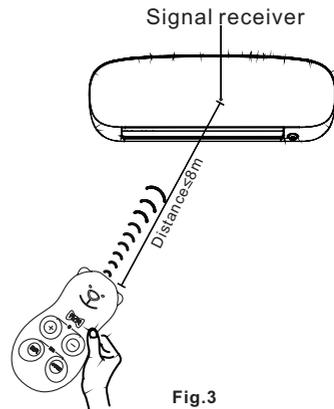


# 3

## How to Use Basic Functions

The following are instructions for using your air Conditioner's basic functions. Refer to **How to Use Advanced Functions** section for those not covered here.

### AUTO Function

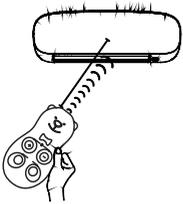

Within a range of 8m




Press this button to turn on the unit and enter AUTO mode



Press this button again to turn off the unit.

**NOTE:**In AUTO mode, the unit will automatically select the COOL or HEAT function based on the set temperature.


### COOL Function

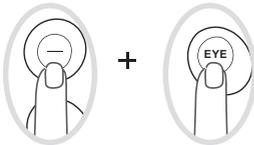

When the unit is off, or not under cool mode, press button “-” and “EYE” simultaneously for one second will start cool operation.

Press this button to turn off the unit.

### HEAT Function

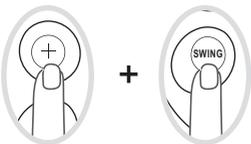

When the unit is off, or not under heat mode, press button “+” and “SWING” simultaneously for one second will start heat operation.

Press this button to turn off the unit.

## SETTING TEMPERATURE



Press “+” or “-” button to set the temperature.

The operating temperature range for units is 17-30°C. You can increase or decrease the set temperature in 0.5°C.

## SETTING FAN SPEED



Hold down SWING button for one second to start fan speed setting mode.

Press “+” or “-” button to select the fan speed: Au, 20, 40, 60, 80 or F.


**NOTE:** FAN SPEED can't be set in AUTO mode.

## Setting Angle of Air Flow

### Setting vertical angle of air flow

While the unit is on, use the **SWING** button to set the direction (vertical angle) of airflow.

Press the **SWING** button to make the louver swing up and down continuously. Press the button until the direction you prefer is reached.

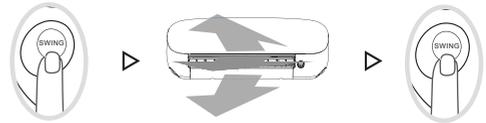

### Setting horizontal angle of air flow

The horizontal angle of the airflow must be set manually. Grip the deflector rod (See **Fig. 7**) and manually adjust it to your preferred direction.



Caution: Do not keep louver at too vertical an angle for long periods of time. This can cause water condensation to drip on your furnishings.

Fig. 6

## NOTE ON LOUVER ANGLES

When using COOL or DRY mode, do not set louver at too vertical an angle for long periods of time. This can cause water to condense on the louver blade, which will drop on your floor or furnishings. (See **Fig. 6** )

When using COOL or HEAT mode, setting the louver at too vertical an angle can reduce the performance of the unit due to restricted air

Do not move louver by hand. This will cause the louver to become out of sync. If this occurs, turn off the unit and unplug it for a few seconds, then restart the unit. This will reset the louver.

Do not put anything into the air outlet or hang anything on it.

## ! CAUTION

Do not put your fingers in or near the blower and suction side of the unit. The high-speed fan inside the unit may cause injury.

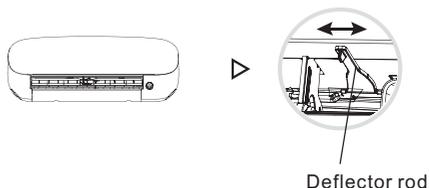


Fig. 7


## LOCK FUNCTION

Use the LOCK function when you want to prevent settings from being changed accidentally. Under lock mode, all current settings are locked, and the remote controller will not accept any operation except that of the LOCK.



Press button “+” and “-” simultaneously for one second to activate LOCK function.

A lock symbol “” will appear on the indoor unit display when the lock function is activated.

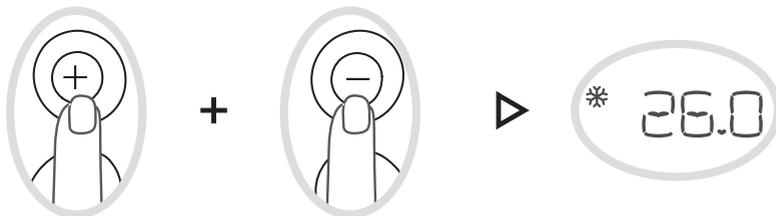

Press button “+” and “-” simultaneously for one second to cancel LOCK function.

A lock symbol “” will disappear from the indoor unit display when the lock function is cancelled.

# How to Use Advanced Functions

# 4

The following are instructions for using your air conditioner's advanced functions.

## ELECTRICAL HEATING FUNCTION

**NOTE:** The electrical heating function is activated automatically when the air conditioner is under heating operation.

To start or stop the electrical heating function by remote control:




Press button “SWING” and “EYE” simultaneously for one second to turn the Electrical heating function on or off. A symbol  will display on the indoor unit display after the electrical heating function is activated.

**NOTE:** In Electrical heating mode, the unit will automatically turn on or off the electrical heating device based on the operation mode, room temperature and set temperature.

## TEMPERATURE DISPLAY FUNCTION

Each press of EYE button for one second will scroll through temperature displays as follows:

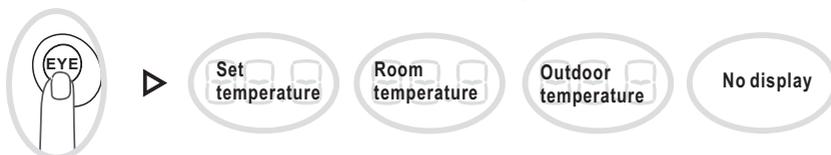

**NOTE:** The temperature can also be checked when the unit is plugged, and is not turned on. The temperature display will disappear in 15 seconds.

## LIGHT SENSITIVE FUNCTION

- The brightness of display screen of air conditioner will change according to the lights of room.
- If the lights of room fades, the brightness of the display screen gets weaker. When the light becomes bright, the brightness of the display screen returns.
- If the room light turns off, after a few seconds, the display screen becomes dark. And the voice of air conditioner buzzer reduces, fan speed shifts to low. when the room light turns on again, the display screen gets brighter.

## ECO FUNCTION

The ECO function can only be activated via WIFI control under cooling operation. The indoor display screen displays “ECO”. It will hold on for 8 hours, then the unit will revert back to the previous cooling operation.

**NOTE:** The ECO operation may result in insufficient cooling capacity, if the outside temperature is too high, please do not select this energy saving mode to avoid feeling uncomfortable.

## INTELLIGENT EYE FUNCTION

The system is controlled intelligently under EYE mode. First it goes into sleeping operation by default, the set temperature and fan speed are automatically controlled. After 20~30 minutes later, the system begins to sense the sleeping state of the children and goes into sleeping detection mode. If it detects the children kicking the blankets and most part of the body exposing, the system will automatically adjust the set temperature, fan speed and the airflow direction of the horizontal louver to protect the children.

Press the EYE button to activate the intelligent eye function, press it again to stop.





The following situations may affect the detection result of the Intelligent Eye:


- size of the room, thickness of the mosquito net, position of bed, double layer bed;
- the children is less than one meter high;
- obstacles between Intelligent Eye and bed;
- a heating appliance in the conditioned space.

### Effective Detection range of intelligent eye:

- cover a level angle of 140 degrees, a fan-shaped area with a radius of 4 meters;
- the detection radius is determined by the air conditioner installation position. It is recommended to install the air conditioner at 220mm~250mm from the floor.
- The lower the air conditioner installs, the smaller the distance the Intelligent Eye detects. Please place the bed near the air conditioner if the bed is higher.

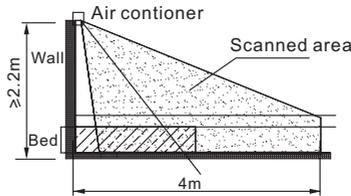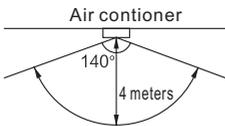

### Suggested installation positions:(AC=air conditioner)

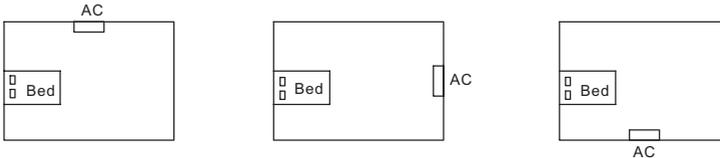

### Not recommended installation positions:(AC=air conditioner)



# Manual Operation (Without Remote)

# 5

## How to operate your unit without the remote control

In the event that your remote control fails to work, your unit can be operated manually with The **MANUAL CONTROL** button located on the indoor unit. Note that manual operation is not a long-term solution, and that operating the unit with your remote control is strongly recommended.

### BEFORE MANUAL OPERATION


Unit must be turned off before manual operation.

To operate your unit manually:

1. Open the front panel of the indoor unit.
2. Locate the **MANUAL CONTROL** button beside of the display screen.
3. Press **MANUAL CONTROL** button repeatedly to change modes as follows:
  - a) Once=AUTO mode(heat or cool, 24°C and auto fan speed)
  - b) Twice=COOL mode(switches off after 30 minutes--testing purpose)
  - c) Three times=OFF
4. Close the front panel.

## ! CAUTION

The manual button is intended for testing purposes and emergency operation only. Please do not use this function unless the remote is lost and it is absolutely necessary. To restore regular operation, use the remote control to activate the unit.

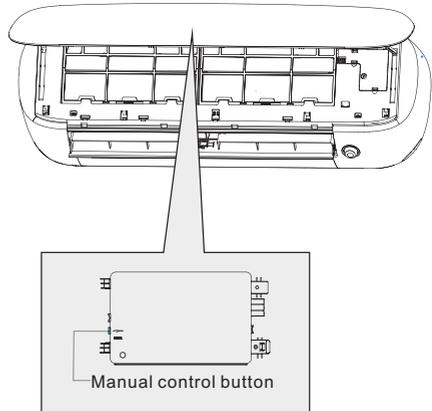

# Care and Maintenance

# 6

## Cleaning Your Indoor Unit

### BEFORE CLEANING OR MAINTENANCE

ALWAYS TURN OFF YOUR AIR CONDITIONING SYSTEM AND DISCONNECT ITS POWER SUPPLY BEFORE CLEANING OR MAINTENANCE.

### CAUTION

Only use a soft, dry cloth to wipe the unit clean. If the unit is especially dirty, you can use a cloth soaked in warm water to wipe it clean.

- **Do not** use chemicals or chemically treated cloths to clean the unit
- **Do not** use benzene, paint thinner, polishing powder or other solvents to clean the unit. They can cause the plastic surface to crack or deform.
- **Do not** use water hotter than 40°C (104°F) to clean the front panel. This can cause the panel to deform or become discolored.

## Cleaning Your Air Filter

A clogged air conditioner can reduce the cooling efficiency of your unit, and can also be bad for your health. Make sure to clean the filter once every two weeks.

1. Lift the front panel of the indoor unit.
2. Grip the tab on the end of the filter, push it up slightly, then pull it a little towards yourself.
3. Now pull down to extract the filter.
4. If your filter has a small air freshening filter, unclip it from the larger filter. Clean this air freshening filter with a hand-held vacuum.
5. Clean the large air filter with warm, soapy water. Be sure to use a mild detergent.

6. Rinse the filter with fresh water, then shake off excess water.
7. Dry it in a cool, dry place, and refrain from exposing it to direct sunlight.
8. When dry, re-clip the air freshening filter to the larger filter, then slide it back into the indoor unit.
9. Close the front panel of the indoor unit.

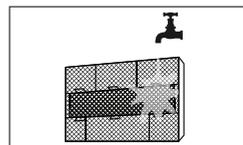
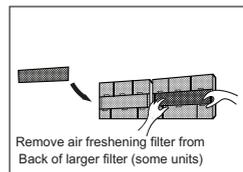
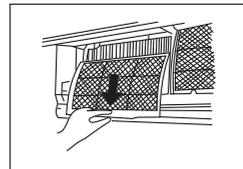
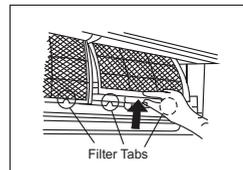


Fig. 6.1

### CAUTION

Do not touch air freshening (Plasma) filter for at least 10 minutes after turning off the unit.

## ! CAUTION


- Before changing the filter or cleaning, turn off the unit and disconnect its power supply.
- When removing filter, do not touch metal parts in the unit. The sharp metal edges can cut you.
- Do not use water to clean the inside of the indoor unit. This can destroy insulation and cause electrical shock.
- Do not expose filter to direct sunlight when drying. This can shrink the filter.

## ! CAUTION

- Any maintenance and cleaning of outdoor unit should be performed by an authorized dealer or licensed service provider.
- Any unit repairs should be performed by authorized dealer or licensed service provider.

## Maintenance - Long Periods of Non-Use


If you plan not to use your air conditioner for an extended period of time, do the following:

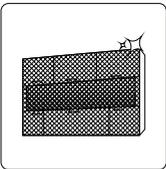


Clean all filters



Turn on FAN function to dry unit

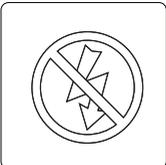


Turn off the unit and disconnect the power

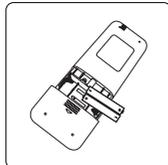


Remove batteries from remote control

## Maintenance - Pre-Season Inspection

After long periods of non-use, or before periods of frequent use, do the following:

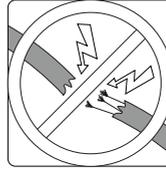


Check for damaged wires

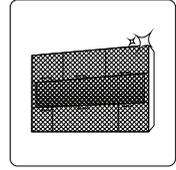

Clean all filters



Check for leaks

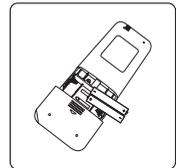

Replace batteries



Make sure nothing is blocking all air inlets and outlets

# Troubleshooting

# 7

## ! SAFETY PRECAUTIONS

If ANY of the following conditions occurs, turn off your unit immediately!

- The power cord is damaged or abnormally warm
- You smell a burning odor
- The unit emits loud or abnormal sounds
- A power fuse blows or the circuit breaker frequently trips
- Water or other objects fall into or out of the unit

**DO NOT ATTEMPT TO FIX THESE YOURSELF! CONTACT AUTHORIZED SERVICE PROVIDER IMMEDIATELY!**

## Common Issues

The following problems are not a malfunction and in most situations will not require repairs.

| Issue  | Possible Causes   |
|--|---|
| <b>Unit does not turn on when pressing ON/OFF button</b> | The Unit has a 3-minute protection feature that prevents the unit from overloading. The unit cannot be restarted within three minutes of being turned off.                      |
| <b>The unit changes from COOL/HEAT mode to FAN mode</b>  | The unit may change its setting to prevent frost from forming on the unit. Once the temperature increases, the unit will start operating in the previously selected mode again. |
|  | The set temperature has been reached, at which point the unit turns off the compressor. The unit will continue operating when the temperature fluctuates again.                 |
| <b>The indoor unit emits white mist</b>                  | In humid regions, a large temperature difference between the room's air and the conditioned air can cause white mist.   |
| <b>Both the indoor and outdoor units emit white mist</b> | When the unit restarts in HEAT mode after defrosting, white mist may be emitted due to moisture generated from the defrosting process.  |

| Issue   | Possible Causes  |
|---|--|
| <b>The indoor unit makes noises</b>                                 | A rushing air sound may occur when the louver resets its position.   |
|   | A squeaking sound may occur after running the unit in HEAT mode due to expansion and contraction of the unit's plastic parts.  |
| <b>Both the indoor unit and outdoor unit make noises</b>            | Low hissing sound during operation: This is normal and is caused by refrigerant gas flowing through both indoor and outdoor units.   |
|   | Low hissing sound when the system starts, has just stopped running, or is defrosting: This noise is normal and is caused by the refrigerant gas stopping or changing direction.  |
|   | Squeaking sound: Normal expansion and contraction of plastic and metal parts caused by temperature changes during operation can cause squeaking noises.  |
| <b>The outdoor unit makes noises</b>                                | The unit will make different sounds based on its current operating mode.   |
| <b>Dust is emitted from either the indoor or outdoor unit</b>       | The unit may accumulate dust during extended periods of non-use, which will be emitted when the unit is turned on. This can be mitigated by covering the unit during long periods of inactivity.   |
| <b>The unit emits a bad odor</b>                                    | The unit may absorb odors from the environment (such as furniture, cooking, cigarettes, etc.) which will be emitted during operations.   |
|   | The unit's filters have become moldy and should be cleaned.  |
| <b>The fan of the outdoor unit does not operate</b>                 | During operation, the fan speed is controlled to optimize product operation.   |
| <b>Operation is erratic, unpredictable, or unit is unresponsive</b> | <p>Interference from cell phone towers and remote boosters may cause the unit to malfunction.</p> <p>In this case, try the following:</p> <ul style="list-style-type: none"> <li>● Disconnect the power, then reconnect.</li> <li>● Press ON/OFF button on remote control to restart operation.</li> </ul> |

**NOTE:** If problem persists, contact a local dealer or your nearest customer service center. Provide them with a detailed description of the unit malfunction as well as your model number.

## Troubleshooting

When troubles occur, please check the following points before contacting a repair company.

| Problem                         | Possible Causes  | Solution  |
|---------------------------------|--|---|
| <b>Poor Cooling Performance</b> | Temperature setting may be higher than ambient room temperature  | Lower the temperature setting   |
|                                 | The heat exchanger on the indoor or outdoor unit is dirty  | Clean the affected heat exchanger   |
|                                 | The air filter is dirty  | Remove the filter and clean it according to instructions                  |
|                                 | The air inlet or outlet of either unit is blocked  | Turn the unit off, remove the obstruction and turn it back on             |
|                                 | Doors and windows are open   | Make sure that all doors and windows are closed while operating the unit  |
|                                 | Excessive heat is generated by sunlight  | Close windows and curtains during periods of high heat or bright sunshine |
|                                 | Too many sources of heat in the room (people, computers, electronics, etc.)                                | Reduce amount of heat sources   |
|                                 | Low refrigerant due to leak or long-term use   | Check for leaks, re-seal if necessary and top off refrigerant             |
| SILENCE function is activated   | SILENCE function can lower product performance by reducing operating frequency. Turn off SILENCE function. |   |

| Problem   | Possible Causes  | Solution  |
|---|--|---|
| <b>The unit is not working</b>  | Power failure  | Wait for the power to be restored                             |
|   | The power is turned off  | Turn on the power   |
|   | The fuse is burned out   | Replace the fuse  |
|   | Remote control batteries are dead  | Replace batteries   |
|   | The Unit's 3-minute protection has been activated  | Wait three minutes after restarting the unit                  |
|   | Timer is activated   | Turn timer off  |
| <b>The unit starts and stops frequently</b>   | There's too much or too little refrigerant in the system   | Check for leaks and recharge the system with refrigerant.     |
|   | Incompressible gas or moisture has entered the system.   | Evacuate and recharge the system with refrigerant             |
|   | The compressor is broken   | Replace the compressor  |
|   | The voltage is too high or too low   | Install a manostat to regulate the voltage                    |
| <b>Poor heating performance</b>   | The outdoor temperature is lower than 7°C (44.5°F)   | Use auxiliary heating device                                  |
|   | Cold air is entering through doors and windows   | Make sure that all doors and windows are closed during use    |
|   | Low refrigerant due to leak or long-term use   | Check for leaks, re-seal if necessary and top off refrigerant |
| <b>Indicator lamps continue flashing</b>  | <p>The unit may stop operation or continue to run safely. If the indicator lamps continue to flash or error codes appear, wait for about 10 minutes. The problem may resolve itself. If not, disconnect the power, then connect it again. Turn the unit on.</p> <p>If the problem persists, disconnect the power and contact your nearest customer service center.</p> |   |
| <b>Error code appears in the window display of indoor unit:</b> <ul style="list-style-type: none"> <li>• E0, E1, E2---</li> <li>• P1, P2, P3---</li> <li>• F1, F2, F3---</li> </ul> |  |   |

**NOTE:** If your problem persists after performing the checks and diagnostics above, turn off your unit immediately and contact an authorized service center.

# European Disposal Guidelines

8

This appliance contains refrigerant and other potentially hazardous materials. When disposing of this appliance, the law requires special collection and treatment. **Do not** dispose of this product as household waste or unsorted municipal waste.

When disposing of this appliance, you have the following options:

- Dispose of the appliance at designated municipal electronic waste collection facility.
- When buying a new appliance, the retailer will take back the old appliance free of charge.
- The manufacturer will take back the old appliance free of charge.
- Sell the appliance to certified scrap metal dealers.

## Special notice

Disposing of this appliance in the forest or other natural surroundings endangers your health and is bad for the environment. Hazardous substances may leak into the ground water and enter the food chain.



The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

CS366U-BPEA  
16122000002694

---